

(On I-80, Exit 267 South) 2096 Moscow Road, Moscow, Iowa 52760

Phone: (800)321-3494 or (563)724-3396 Fax: (563)724-3408 Internet: www.hwhcorp.com

## PRODUCT/SERVICE BULLETIN

ISSUE DATE: September, 1988

TO: Air Leveling System Users

FROM: HWH Corporation

RE: Towing a Vehicle with an HWH Air Leveling System

## TOWING A VEHICLE WITH AN HWH AIR LEVELING SYSTEM

On any motor coach with an HWH Air Leveling system, the vehicles air bags will not inflate as long as the ignition key is in the "OFF" position. Consequently, if the vehicle should ever require emergency towing, the ignition key must be left in the "ON" position in order to build and store air in the suspension. In addition, the ignition must be left in the "ON" position when adjusting the height control valves.

We recommend that a warning label be placed in a strategic location where it is likely to be seen by tow vehicle operators.

## ATTENTION TOW VEHICLE OPERATORS

When towing this vehicle, the ignition MUST be left in the "ON" position, in order that the air suspension may operate.