

HWH TOUCH PANEL-CONTROLLED AIR LEVELING SYSTEM

CAUTION: READ AND UNDERSTAND ENTIRE OPERATOR'S MANUAL INCLUDING CAUTIONS, BEFORE OPERATING. THIS SHEET IS FOR QUICK REFERENCE ONLY.

LEVELING

1. RUN THE COACH ENGINE DURING LEVELING. TRANSMISSION SHIFT MUST BE IN THE PROPER POSITION FOR PARKING. PARK BRAKE MUST BE SET.
2. PRESS THE "ON" BUTTON. THE ON INDICATOR LIGHT WILL BE ON STEADY.
3. PRESS THE "RAISE" OR "LOWER" MANUAL BUTTONS TO RAISE OR LOWER THE RESPECTIVE SIDE OR END OF THE COACH. THESE ARE MOMENTARY BUTTONS, THE FUNCTION WILL STOP WHEN THE BUTTON IS RELEASED. A YELLOW LIGHT TO THE FRONT, SIDE OR REAR OF THE COACH OUTLINE INDICATES THAT SIDE OR END IS LOW.

IMPORTANT: GIVE PRIORITY TO ANY SIDE LIGHT BEFORE LEVELING THE COACH FROM FRONT TO REAR. LOWER THE OPPOSITE SIDE OR END OF YELLOW "LEVEL" LIGHTS TO ACHIEVE LEVEL. IF A LEVEL POSITION CAN NOT BE ACHIEVED BY LOWERING THE COACH, RAISE THE COACH ACCORDING TO THE LIT YELLOW LIGHTS TO LEVEL THE COACH.

4. PUSH "OFF" BUTTON ON TOUCH PANEL.
5. TURN COACH ENGINE OFF.



