


# HWH JOY STICK-CONTROLLED HYDRAULIC LEVELING SYSTEM WITH HYDRAULIC ROOM EXTENSION

**CAUTION:** READ AND UNDERSTAND ENTIRE OPERATOR'S MANUAL INCLUDING CAUTIONS BEFORE OPERATING. THIS SHEET IS FOR QUICK REFERENCE ONLY.

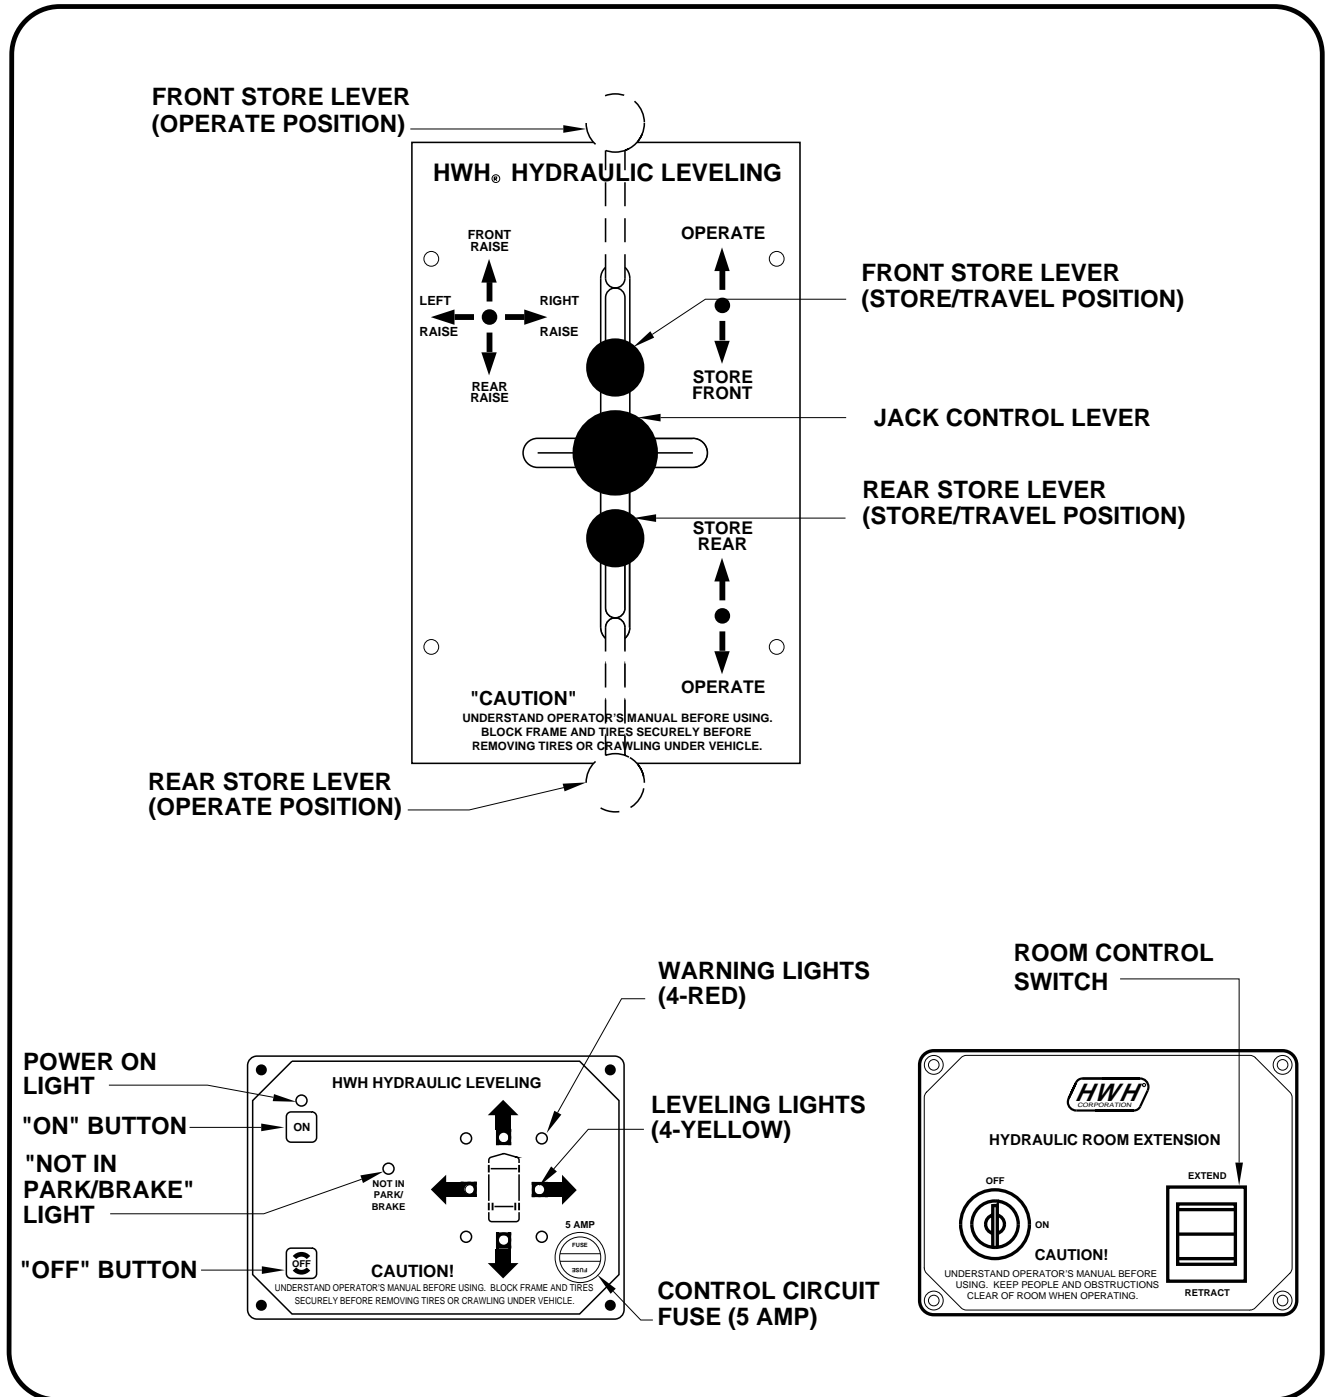

(CONTINUED)

---

# HWH JOY STICK-CONTROLLED HYDRAULIC LEVELING SYSTEM WITH HYDRAULIC ROOM EXTENSION (CONT'D)

---

## LEVELING AND STABILIZING PROCEDURE

1. Place transmission gear selector in its parking position, apply park brake, and securely block tires.
2. Turn the ignition switch to ACCESSORY, and press the "ON" BUTTON. The POWER ON LIGHT will illuminate.
3. Move the FRONT STORE LEVER and REAR STORE LEVER to their "OPERATE" POSITIONS.
4. Jacks are extended in pairs by moving the JACK CONTROL LEVER to one of the "RAISE" positions. When a jack extends two inches or more its corresponding WARNING LIGHT illuminates. An illuminated LEVELING LIGHT indicates the side or end of the vehicle that is low. Extend jacks in pairs accordingly until all LEVELING LIGHTS are out. If the ground is too uneven the jacks may not have enough stroke to level the vehicle. The vehicle may have to be moved.
5. Stabilize the vehicle by extending any jacks that are not touching the ground. To extend remaining jacks move the JACK CONTROL LEVER to the "FRONT RAISE" or "REAR RAISE" position. Do not use the "LEFT RAISE" or "RIGHT RAISE" position for stabilizing.
6. If the room is to be extended proceed to the ROOM EXTEND PROCEDURE. Otherwise, press the "OFF" BUTTON and turn the ignition switch OFF.

## ROOM EXTEND PROCEDURE

1. Follow the LEVELING AND STABILIZING PROCEDURE.
2. Unlock all room-locking devices.
3. Press and hold the ROOM CONTROL SWITCH in the EXTEND position. Release the ROOM CONTROL SWITCH when the room is fully extended.
4. Press the "OFF" BUTTON and turn the ignition switch OFF.

## ROOM RETRACT PROCEDURE

1. Turn the ignition switch to ACCESSORY and press the RETRACT BUTTON.
2. Press and hold the ROOM CONTROL SWITCH in the RETRACT position. Release the ROOM CONTROL SWITCH when the room is fully retracted.
3. Press the "OFF" BUTTON and turn the ignition switch OFF.
4. Engage all room-locking devices.

## LEVELING SYSTEM RETRACT PROCEDURE

1. Follow ROOM RETRACT PROCEDURE if the room is extended.
2. Move the FRONT STORE LEVER and the REAR STORE LEVER to the STORE/TRAVEL POSITION.

**CAUTION:** THE STORE LEVERS SHOULD BE KEPT IN THE "STORE" POSITION WHILE TRAVELING TO KEEP THE JACKS IN THE STORE/TRAVEL POSITION.

3. Visually check that each jack is in its STORE/TRAVEL POSITION.

**CAUTION:** DO NOT RELY SOLELY UPON THE WARNING LIGHTS, THE "JACKS DOWN" LIGHT OR THE WARNING BUZZER AS AN INDICATION THAT ALL THE JACKS ARE IN THE STORE/TRAVEL POSITION.

4. Press the "OFF" BUTTON and turn the ignition switch OFF.