


# HWH TOUCH PANEL-CONTROLLED HYDRAULIC LEVELING SYSTEM - STRAIGHT-ACTING JACKS WITH HYDRAULIC ROOM EXTENSION

**CAUTION: READ AND UNDERSTAND ENTIRE OPERATOR'S MANUAL INCLUDING CAUTIONS BEFORE OPERATING. THIS SHEET IS FOR QUICK REFERENCE ONLY.**

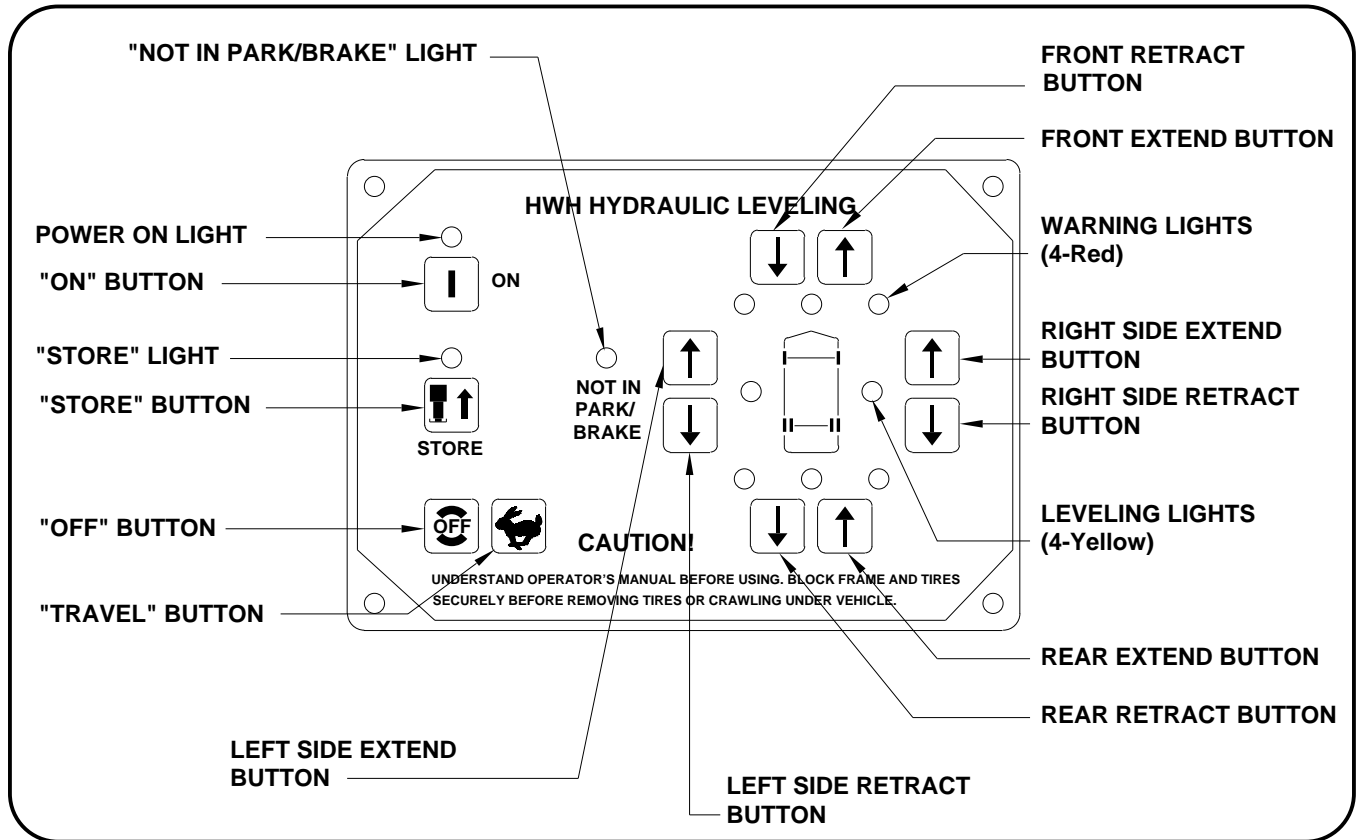

## LEVELING AND STABILIZING PROCEDURE

1. The transmission shift must be in the position for parking.  
The park brake must be set.  
The leveling jacks cannot be extended and the room(s) cannot be operated if the NOT IN PART / BRAKE light is on.
2. Turn the ignition switch to the "ACC" or "ON" position.
3. Press the "ON" button.  
The POWER ON LIGHT will come on.  
The air will dump from the suspension. Allow the air to exhaust completely before continuing.
4. Press and hold EXTEND BUTTONS (UP ARROWS) to extend jack pairs according to lit yellow leveling lights.  
Hold the button until the yellow light goes out.  
A lit yellow light indicates a side or end of the coach is low.  
The Extend and Retract buttons always operate pairs of jacks, front, rear, right side or left side.  
NOTE: Always level the coach from side to side before leveling the coach front to rear.
5. When all yellow level lights are out, use the front and/or rear extend buttons to extend jacks not used for leveling to stabilize the coach. These jacks should slightly lift the coach after touching the ground.
6. Push the "OFF" button.

---

# HWH TOUCH PANEL-CONTROLLED HYDRAULIC LEVELING SYSTEM - STRAIGHT-ACTING JACKS WITH HYDRAULIC ROOM EXTENSION (Continued)

---

## ROOM EXTEND PROCEDURE

NOTE: Coach should be leveled before operating room extension.

Park Brake must be set before the room can be operated.

1. Unlock all room-locking devices.
2. Press and hold the ROOM CONTROL SWITCH IN THE EXTEND POSITION.

Continue to press the switch for approximately 5 seconds after the room is fully extended.

NOTE: Releasing the room control switch will halt the operation of the room.

**IMPORTANT:** Release the switch immediately if either or both sides of the room stops moving before the room is fully extended.

## ROOM RETRACT PROCEDURE

NOTE: Coach should be leveled before operating room extension.

Park Brake must be set before the room can be operated.

1. Press and hold the ROOM CONTROL SWITCH IN THE RETRACT POSITION.

Continue to press the switch for approximately 5 seconds after the room is fully retracted.

NOTE: Releasing the room control switch will halt the operation of the room.

**IMPORTANT:** Release the switch immediately if either or both sides of the room stops moving before the room is fully extended.

2. Lock all room-locking devices.

## LEVELING SYSTEM RETRACT PROCEDURE

1. Start the engine.
2. Press the "ON" button. The Power On Light will come on.
3. Press the "STORE" button.

The "STORE" light will come on.

All four jacks will retract.

As a jack is within one inch or less of fully retracted, it's respective red warning light will go out.

4. Push the "TRAVEL" button. The coach will return to ride height.

**IMPORTANT:** DO NOT interrupt power to the leveling system while the "STORE" light is on.

Do not push "OFF" or turn the ignition key.

The system will shut itself off.

NOTE: The ignition must be in the "ON" or "ACC" position to return the coach to ride height.

With the ignition on, pushing the "TRAVEL" button or releasing the park brake will return the vehicle to ride height.

The leveling panel does not have to be on to use the "TRAVEL" button.