



## ABRIDGED OPERATING INSTRUCTIONS

HWH® Touch Panel-Controlled Hydraulic Leveling System  
with Straight-Acting Jacks and  
Hydraulic Room Extension Systems

**CAUTION:** Read and understand entire Operator's Manual, including CAUTIONS, before operating. This sheet is for quick reference only.

**IMPORTANT:** It is recommended that you level and stabilize the vehicle before operating any room extensions.

### LEVELING PROCEDURE

1. Place the gear selector in the parking position.
2. Turn the ignition switch to "Accessory".
3. Push the "ON" button on the touch panel. If the "NOT IN PARK/BRAKE" indicator light comes on, the panel will turn on but the system will not operate.
4. On the right hand portion of the HWH Touch Panel, note the outline of a coach and the various RAISE (Up Arrows) (Extend Jacks - raise the coach) and LOWER (Down Arrows) (Retract Jacks - lower the coach) touch buttons.


A lit yellow level light to the front, side or rear of the coach outline indicates that side or end is low. When all of the yellow lights are out, the coach is level. Using the yellow LEVEL SENSING indicator lights as guides, press and hold the corresponding RAISE (Up Arrow) button. Continue to hold the RAISE button until the corresponding yellow LEVEL SENSING indicator light goes out. Release the RAISE button. Repeat this procedure for each yellow LEVEL SENSING indicator light, should they come on.

**NOTE:** Jacks will always work in pairs. Front (right front and left front jacks), right side (right front and right rear jacks), left side (left front and left rear jacks) or rear (left rear and right rear jacks). Always level the vehicle side to side first if necessary.

### STABILIZING PROCEDURE

After the vehicle is level, stabilize the vehicle by extending the jacks not used to level the vehicle. Using the RAISE FRONT and RAISE

REAR (Up Arrow) buttons only, extend the remaining jacks until they touch the ground and slightly lift the vehicle.

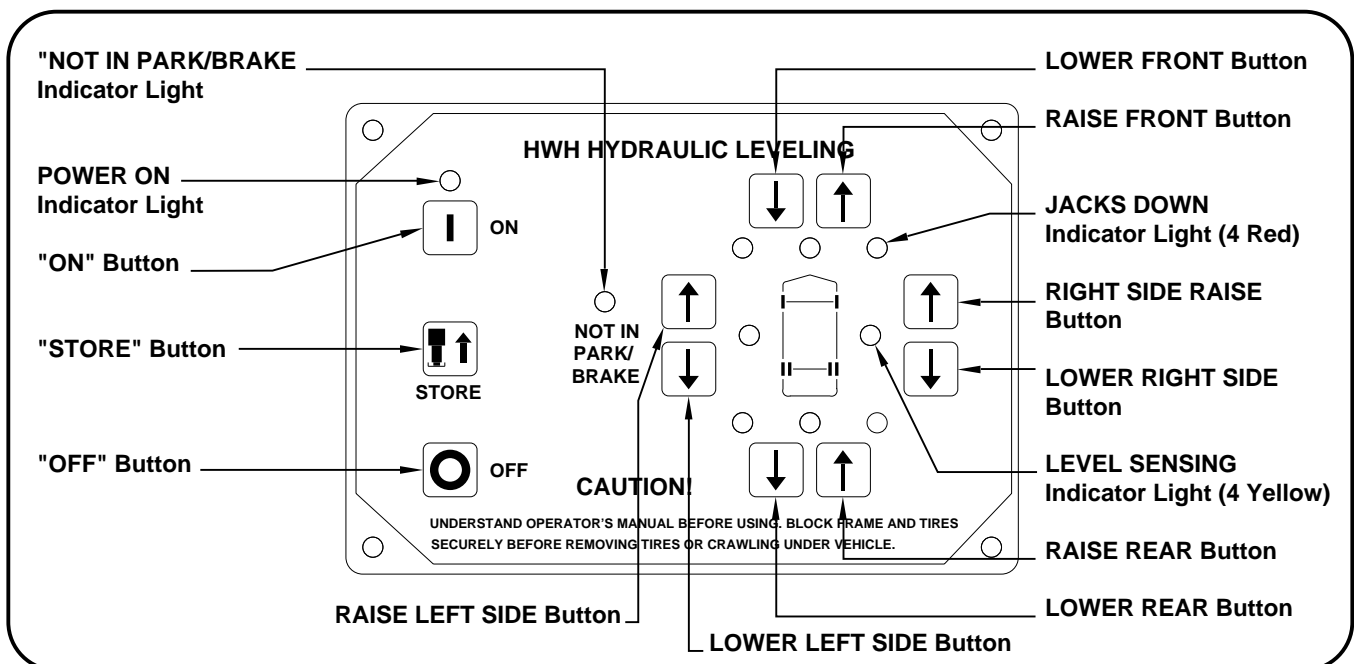

## ROOM EXTEND / RETRACT PROCEDURES

When extending or retracting a room, the park brake must be set and the vehicle should be leveled and stabilized using the hydraulic jacks.

To extend or retract a room, push and hold the ROOM CONTROL SWITCH in the appropriate position until the room is fully extended or retracted. Hold the switch an additional three or four seconds after the room is fully extended or retracted to ensure proper pressurization of the room cylinders.

**IMPORTANT:** Do not hold the ROOM CONTROL SWITCH in either the "Extend" or "Retract" position for more than ten seconds after the room is fully extended, fully retracted or just stops moving.

**IMPORTANT:** In the event either or both sides of the room stop moving before being fully extended or retracted, release the ROOM CONTROL SWITCH immediately. Do not force the room. Do not reverse direction of the room. Contact HWH Customer Service for assistance at 1-800-321-3494.

## STORE PROCEDURES

**IMPORTANT:** Do not retract the leveling system until all rooms are fully retracted.

1. Press the "ON" button one time.
2. Press the "STORE" button one time.

The vehicle can be moved as soon as the red JACKS DOWN indicator lights are out, provided the jacks are in the Store/Travel position.

**IMPORTANT:** Do not interrupt power to the leveling system while it is in the Store Mode. Do not push the "OFF" button or turn the ignition key. The system will automatically shut off.